



**FREESTYLE**  
endurance  
**721 PREDATOR™**  
INSTRUCTIONS

**FEATURES:**

- **CURRENT TIME (HR., MIN., & SEC.), DAY, DATE**
- **CHRONOGRAPH WITH SPLIT AND LAP TIMER**
- **CHRONOGRAPH 10 LAP RECALL**
- **TWO DAILY ALARMS & HOURLY CHIME**
- **COUNTDOWN TIMER**
- **DUAL TIME**
- **OPTIONAL 24-HR. TIME (MILITARY TIME)**
- **WATER RESISTANT TO 300 FT.**
- **NIGHT VISION™ ELEC-TROLUMINESCENT BACKLIGHTING**
- **PROTECTIVE BUMPER**



- D - SET                      B - STOP  
C - MODE                  A - LIGHT  
E - LAP                      ● - flashing digits

(The term "mode" means the function status of the watch.) Normal time mode shows hours, minutes, seconds, day, date. This mode is preceded by the prompt "T1"



**HOW TO SET NORMAL TIME, DATE AND 24-HOUR FORMAT**

Before setting time, you must be in normal time mode. Press and hold **SET** button **D** while in normal time mode, to enter the "set time" mode. Seconds digits will flash. Press **LAP** button **E** to reset the seconds digits to zero. If seconds are greater than 30, the minutes display will increase by one.



Press **MODE** button **C** to cycle through the remaining digits to be set. Advance flashing digits by pressing **LAP** button **E**; hold for rapid advance. The setting sequence is: seconds, hours, minutes, day, year, month, and date, you may press **SET** button **D** to complete setting at any time.

Press **STOP** button **B** to arm or disarm the hourly chime (🔔).

**HOW TO OPERATE CHRONOGRAPH/STOPWATCH**

The chronograph will record a maximum interval of 99 hours, 59 minutes and 59 seconds, and has a resolution of 1/100 of a second for intervals less than one hour.

Press **MODE** button **C** once from normal time mode to enter the chronograph mode; mode prompt "CH" will be displayed for two seconds.

To start the chronograph, press **LAP** button **E**. To use the lap time feature, press **LAP** button **E** while chrono is running. This will display lap and split time, lap number and lap time for four-five seconds, then split number and split time which will also be displayed for four to five seconds. The display will then return to the current running time.



Press **LAP** button **E** again to record the next lap and split time. When the timing session is complete, press **STOP** button **B** to stop the chronograph. Press **STOP** button **B** again to reset the chronograph to zero. The lap times of this session are automatically stored in memory (unless memory is full).

**HOW TO RECALL LAP TIMES**

From normal time mode, enter the recall mode by pressing **MODE** button **C** twice. Mode prompt "REC" will be displayed for two seconds.

Press **LAP** button **E** to scan the recorded data in sequence, from "LP 1" to "LP 9," and the last lap, "LP." Press **SET** button **D** to toggle the display between lap and split times.



Only the first nine laps and the last lap, (10th lap), will be stored in the memory.

All data stored in memory will be cleared when the chronograph is reset. The chronograph is reset while in the chronograph mode by pressing **STOP** button **B** after the chronograph has been stopped, or from the recall mode by pressing **STOP** button **B** twice.

**HOW TO SET AND OPERATE THE COUNTDOWN TIMER**

From normal time mode, press **MODE** button **C** three times to enter the timer mode. Mode prompt "TR" will be displayed for two seconds.

Press and hold **SET** button **D** for two to three seconds to enter the setting mode; hours digits will flash. Press **LAP** button **E** to increase the flashing digit. Press **MODE** button **C** to advance from hours, to minutes, to seconds. Once the timer is set, press **SET** button **D** to exit the setting mode. The timer is now ready to use



Press **LAP** button **E** to start the timer. Press **STOP** button **B** to stop the timer. Press **SET** button **D** to reset the timer to preset time. A single chime will sound for each of the

final five, three and one minute points during the countdown period. When the timer reaches zero, the chime will sound for 10 seconds.

**HOW TO SET DUAL TIME**

Press **MODE** button **C** four times from normal time mode to enter the dual time mode. Mode prompt "T2" will be displayed for two seconds.



Note: In this mode, the AM/PM flag pertains to the dual time zone only.

To set dual time, follow the same procedure as indicated for setting normal time.

**HOW TO SET AND OPERATE THE TWO DAILY ALARMS**

The Predator™ has two distinct daily alarms, which can be set to either normal time, dual time, or both. From normal time mode, press **MODE** button **C** five times to enter the alarm mode. Mode prompt "AL" will be displayed for two seconds. "T1" or "T2", (indicating normal time [T1] or dual time [T2]), and "AL1" or "AL2", (indicating first or second alarm), will be displayed on the upper row. Alarm time will be displayed on the lower row.



Press **LAP** button **E** to select first alarm (AL1) or second alarm (AL2). Press and hold **SET** button **D** to enter the alarm set mode; hours digits will flash. Press **LAP** button **E** to advance hours digits.

Press **MODE** button **C**; minutes digits will flash. Press **LAP** button **E** to advance minutes digits. Press **MODE** button **C**; "T1" or "T2" will flash. Press **LAP** button **E** to toggle between "T1" and "T2". When setting is complete, press **SET** button **D** to exit the setting mode.

To arm or disarm the daily alarms (🔔), press **STOP** button **B** while in the alarm mode. Press **LAP** button **E** to toggle between alarm 1 (AL1) and alarm 2 (AL2). *continued...*

**HOW TO OPERATE THE NIGHT VISION™ ELECTROLUMINESCENT BACKLIGHT**

Press **LIGHT** button **A** to activate the Night Vision™ electroluminescent backlight.

1. Back case cover should only be removed by an authorized watch repair specialist.
2. Always rinse your watch in fresh water after immersion in salt or chlorinated water.
3. Do not expose watch or band to chemicals such as gasoline, aerosol sprays, paint or solvents.
4. Periodically clean with a soft cloth and fresh water.

WARRANTY INFORMATION

Freestyle warrants, to the original purchaser, that its watches are free from defects in materials and workmanship for a period of ten (10) years under normal use. The warranty excludes batteries, crystal, watch case plating, and strap/bracelet/band. The warranty excludes normal wear and tear and abuse.

Should your Freestyle® watch require warranty service, send it along with the following:

1. Acopy of your sales receipt
2. Your printed name and address
3. Your telephone number
4. Abrief description of the problem
5. If your watch was purchased within the last year, there is no charge for processing and handling; if your watch was purchased more than 12 months ago, please include \$8.00 for processing and handling, using one of the following payment methods:

- Check
- Money Order
- Credit Card (be sure to include card number and expiration date)

REMEMBER: NEVER INCLUDE A SPECIAL WATCHBAND OR PERSONAL ARTICLES IN YOUR SHIPMENT.

Send to the following address marked ATTN: INDIVIDUAL RETURNS.

Freestyle  
Attn: Individual Returns  
5855 Olivas Park Drive  
Ventura, CA 93003

(805) 477-1200 ext.240

Please allow 20 days for return of your watch.

Neither this warranty, nor any other warranty expressed, is assumed for any incidental or consequential damages, including but not limited to the mathematical accuracy of the product. Some states do not allow limitations on how long an implied warranty lasts, or the exclusions of or limitations on consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

This warranty applies to watches purchased in the United States. For watches purchased outside the United States, please contact your authorized Freestyle dealer for warranty information.

If your watch requires servicing not covered under our warranty (battery, crystal, strap/bracelet/band, watch case plating), or refurbishing, complete the return form (next column) and return with your watch. Be sure to include a check, money order or credit card information for desired replacement parts. Please include \$8.00 for processing and handling.

Visit our website at:  
[www.freestyleusa.com](http://www.freestyleusa.com)



**FREESTYLE**  
e n d u r a n c e

Freestyle  
Attn: Individual Returns  
5855 Olivas Park Road  
Ventura, CA 93003

	PRICE	TOTAL
Battery	\$ 4.00	_____
Case	10.00	_____
Bezel	6.00	_____
Band(Polyurethane)	10.00	_____
Band(Nylon)	6.00	_____
Band(Metal)	15.00	_____
Future tide module upgrade	50.00	_____
California residents add 7.25% tax		_____
Processing and handling		8.00
<b>Total</b>		<b>\$ _____</b>

- Check or Money Order
- Master Card
- Visa

Account # \_\_\_\_\_ Expiration Date \_\_\_\_\_

Printed Name \_\_\_\_\_

Address \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Phone Number \_\_\_\_\_ E-mail Address \_\_\_\_\_

Signature (required for credit purchase)

Would you be interested in hearing about new Freestyle® products and promotions?

- Yes
- No