

Press Mode button **LB** to advance to the tens of minutes digits, and hours digits. Press Start/Stop button **RT** to advance the flashing digit. When desired timer time is set, press Light/Set button **LT** to exit the setting mode. To start or stop timer, press Start/Stop button **RT**. To reset a stopped timer, press Reset button **RB**.



HOW TO SET DUAL TIME

Press Mode button **LB** four times to enter the dual time mode from the normal time mode. The dual time mode is indicated by the "T2" flag.

Normal time will remain in the lower row and dual time will appear on the upper row.



Press and hold the Light/Set button **LT** for approximately three seconds; the minutes digits will flash. Press Start/Stop button **RT** to advance.



Continue through the setting sequence as done in normal time setting by cycling between Mode button **LB** and Start/Stop button **RT**. Press Light/Set button **LT** to exit the setting mode.

Note: Press and hold Start/Stop button **RT** to temporarily display the day and date of the normal time.



Note: The alarm and chime flags are visible in this mode, however, they are set to the normal time mode.

HOW TO OPERATE THE NIGHTVISION™ ELECTROLUMINESCENT BACKLIGHT

Press Light/Set button **LT** to activate the Night Vision™ electroluminescent backlight. This light will remain illuminated for approximately four seconds.

CARE AND MAINTENANCE

1. Back case cover should only be removed by an authorized watch repair specialist.
2. Always rinse your watch in fresh water after immersion in salt or chlorinated water.

3. Do not expose watch or band to chemicals such as gasoline, aerosol sprays, paint or solvents.
4. Periodically clean with a soft cloth and fresh water.

WARRANTY INFORMATION

Freestyle U.S.A. warrants, to the original purchaser, that its watches are free from defects in materials and workmanship for a period of ten (10) years under normal use. The warranty excludes batteries, crystal, watch case plating, and strap/bracelet/band. The warranty excludes normal wear and tear and abuse.

Special note: Freestyle® watches are designed and engineered to be highly water-resistant, and to withstand the most active of lifestyles. The most important component in keeping your watch water-resistant is the case back O-ring, which prevents water from entering the watch through the case back.

Water leakage most often occurs after improper battery replacement. We strongly recommend having a certified jeweler, watch repair technician or Freestyle's service center replace your battery. Water leakage due to improper battery replacement is not covered under warranty.

Should your Freestyle® watch require warranty service, send it along with the following:

1. A copy of your sales receipt
2. Your printed name and address
3. Your telephone number
4. A brief description of the problem
5. Please include \$8.50 for processing and handling, using one of the following payment methods:

- Check
- Money order
- Credit card (be sure to include card number and expiration date)

REMEMBER: NEVER INCLUDE A SPECIAL WATCHBAND OR ANY OTHER PERSONAL ARTICLES OF VALUE IN YOUR SHIPMENT.

Send to the following address:

Freestyle
Attn: Individual Returns
47-50 33rd Street
Long Island City, NY 11101

(718)-729-8890

Please allow 30 days for return of your watch.

Neither this warranty, nor any other warranty expressed, is assumed for any incidental or consequential damages, including but not limited to the mathematical accuracy of the product. Some states do not allow limitations on how long an implied warranty lasts, or the exclusions of or limitations on consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

This warranty applies to watches purchased in the United States. For watches purchased outside the United States, please contact your authorized Freestyle® dealer for warranty information.

If your watch requires servicing not covered under our warranty (battery, crystal, strap/bracelet/band, watch case plating), or refurbishing, complete the return form (next column) and return with your watch.

Visit our website at:
www.freestyleusa.com



Freestyle®

Attn: Individual Returns
47-50 33rd Street
Long Island City, NY 11101
(718)-729-8890

Battery	\$ 4.00
Case	10.00
Bezel	6.00
Band(Polyurethane)	12.00
Band(Leather)	12.00
Band(Metal)	20.00
Band(Nylon)	7.00
Processing and handling	8.50

Total \$ _____

- Check or Money Order
- Master Card
- Visa

Account# _____ Expiration Date _____

Printed Name _____

Address _____

Phone Number _____

Signature _____