




#191 BLUNT™ WATCH INSTRUCTIONS

Thanks for throwing down a little cash for a Freestyle® watch. In doing so, you have reinforced your commitment to quality, integrity and self-expression. This is why our watches are backed up with a ten-year warranty, twenty years of watch making experience, and our FCC (Freestyle Custom Compliant) stamp of approval. So strap it on and enjoy. Oh yeah, and feel free to check out the instructions below for more info on how to use the BLUNT™.

FEATURES:

- WATER RESISTANT TO 50M
- ANA-DIG MOVEMENT
- 24 HOUR TIME DISPLAY OPTION
- DUAL TIME
- DAILY ALARM
- STOPWATCH
- NIGHT VISION™ ILLUMINATION

KEY REFERENCES

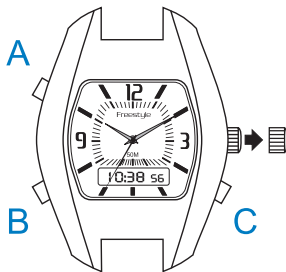

HOW TO SET THE CURRENT TIME

To set **analog** time, pull out the crown as shown in the picture above. Rotate the crown to move the hands to the desired time. Push the crown back into its original position.

To set **digital** time, you must be in current time mode. Press A to select the current time mode. Press and hold B for two seconds. The seconds will flash. Press C to reset the seconds to zero.

Press B to flash the minutes. Press C to set the minutes. You can press and hold C to rapidly advance the numbers.

Once the minutes are set, press B to flash the hour. Press C to set the hour. The AM/PM indicators flash above the seconds digits.

Press B to select between 12 Hour mode and 24 Hour mode. Press C to toggle between these options.

When the time is set, press B to confirm the time setting and return to the normal time display.

HOW TO SET THE DAILY ALARM

Press A to select the alarm mode. The segment "ALM" will flash. From the alarm mode, press and hold B for two seconds. The hours will flash. Press C to set the hour. Once the hour is set, press B to flash the minutes. Press C to set the minutes. Press B to confirm the alarm time and exit the setting mode.

USING THE DAILY ALARM

To turn the daily alarm on or off, press C from alarm mode. The alarm indicator will appear when the alarm is turned on. Press C again to turn off the alarm. The alarm indicator will disappear. When the alarm is activated and the alarm sounds, press any button to turn it off.

HOW TO USE THE STOPWATCH

To use the stopwatch, press A to enter the stopwatch mode. Press C to start the timing. Press C again to stop the timing. To clear the stopwatch, press B.

HOW TO SET THE CALENDAR

Press A to select the calendar mode. Press and hold B for two seconds. The date will flash. Press C to adjust the date.

Once the date is selected, press B to flash the month. Press C to adjust the month.

Once the month is selected, press B to flash the day. Press C to adjust the day.

Press B to exit the calendar setting mode. The calendar mode includes an automatic month end adjustment, so you will not need to set the correct day at the beginning of each month.

HOW TO OPERATE THE NIGHT VISION™

Press C to activate the Night Vision™ illumination. The light will remain illuminated as long as the button is pushed down.

CARE AND MAINTENANCE

1. Back case cover should only be removed by an authorized watch repair specialist.
2. Always rinse your watch in fresh water after immersion in salt or chlorinated water.
3. Do not expose watch or band to chemicals such as gasoline, aerosol sprays, paint or solvents.
4. Periodically clean with a soft cloth and fresh water.

WARRANTY INFORMATION

FreeStyle warrants, to the original purchaser, that its watches are free from defects in materials and workmanship for a period of ten (10) years under normal use. The warranty excludes batteries, crystal, watch case plating, and strap/bracelet/ band. The warranty excludes normal wear and tear and abuse.

Special note: FreeStyle® watches are designed and engineered to be highly water-resistant, and to withstand the most active of lifestyles. The most important component in keeping your watch water-resistant is the case back O-ring, which prevents water from entering the watch through the case back.

Water leakage most often occurs after improper battery replacement. We strongly recommend having a certified jeweler, watch repair technician or FreeStyle's service center replace your battery. Water leakage due to improper battery replacement is not covered under warranty.

Should your FreeStyle® watch require warranty service, send it along with the following:

1. A copy of your sales receipt
2. Your printed name and address
3. Your telephone number
4. A brief description of the problem
5. If your watch was purchased within the last year, there is no charge for processing and handling; if your watch was purchased more than 12 months ago, please include \$8.00 for processing and handling, using one of the following payment methods:

- Check
- Money order
- Visa or Mastercard (be sure to include card number and expiration date)

REMEMBER: NEVER INCLUDE A SPECIAL WATCHBAND OR ANY OTHER PERSONAL ARTICLES OF VALUE IN YOUR SHIPMENT.

Send to the following address:

FreeStyle
Attn: Individual Returns
5855 Olivas Park Drive
Ventura, CA 93003

(805) 477-1240

Please allow 20 working days for return of your watch.

Neither this warranty, nor any other warranty expressed, is assumed for any incidental or consequential damages, including but not limited to the mathematical accuracy of the product. Some states do not allow limitations on how long an implied warranty lasts, or the exclusions of or limitations on consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

This warranty applies to watches purchased in the United States. For watches purchased outside the United States, please contact your authorized FreeStyle® dealer for warranty information.

If your watch requires servicing not covered under our warranty (battery, crystal, strap/bracelet/band, watch case plating), or refurbishing, complete the return form (next column) and return with your watch. Be sure to include a check, money order or credit card information for desired replacement parts. Please include \$8.00 for processing and handling.

Visit our website at:
www.freestyleusa.com

