



**Freestyle®**

**SHARK  
CLASSIC MID**

**FEATURES:**

- CURRENT TIME
- DAY/MONTH/DATE
- TWO DAILY ALARM
- HOURLY CHIME
- STOPWATCH
- OPTIONAL 24-HR. TIME
- WATER RESISTANT TO 300FT/100M
- NIGHT VISION™ BACK LIGHT

**KEY TO SYMBOLS**



**INTRODUCTION**

Congratulations on your purchasing the Easy-Set Watch II. Designed for easy operation, the watch automatically tells you which button to use in a setting procedure. The watch has the following functions:

- Real-time calendar clock for home time
- Second calendar clock for foreign time
- Dual daily alarms and hourly chimes
- Stopwatch with split function
- 10 preset countdown timers

The watch is also equipped with an EL back light to facilitate time reading at night or in dim light.

**HOW TO USE THE BACK LIGHT**

Press the LIGHT button once to turn on the back light for three seconds.

**DISPLAY MODES**

The watch has four display modes: home time (TIME), home time alarm (ALM1), stopwatch (STW) and countdown timer (TMR).

To change from one display mode to another, press the S3 button once. The mode description will appear for two seconds before activating the selected mode.

**HOME AND FOREIGN DISPLAY**

To display the foreign time, press S2 when the home time is displayed. The mode description (TM-2) will appear shortly before the foreign time is displayed. To change back to the home time, press S2.

To display the daily alarm for foreign time, press S2 when the daily alarm for home time is displayed. The mode description (ALM 2) will appear shortly before the foreign time alarm is displayed.

**HOW TO SET THE TIME AND DATE**

- 1 Select time display using the S3 button.
- 2 Select home time or foreign time using the S2 button.
- 3 Hold the S2 button for two seconds. The SET message will appear momentarily. The second digits will blink.
- 4 Press the S1 button to reset the second digits to 00.
- 5 Press the S3 button. The minute digits will blink.
- 6 Use the S1 button to set the minutes. Press the button once to increase the digits by one unit or speed up the process by holding down the button.
- 7 Press the S3 button. The hour digits will blink.
- 8 Use the S1 button to set the hours.
- 9 Follow the same pattern to set the day-of-the-month, month, day-of-the-week, hour format and date format. For the hour format, you can choose 12-hour display with P indicator or 24-hour display. As for the date format, you can choose M-D (month-day) or D-M (day-month). The chosen formats will apply to both home and foreign settings.
- 10 Press the S2 button to confirm the settings and return to current time display.

**HOW TO DISPLAY THE DATE**

To display the date, press S1 when the time is displayed. Press the button again to go back to time display. The watch will also do so automatically after six seconds.

**HOW TO SET THE DAILY ALARMS**

- 1 Select alarm function using the S3 button.
- 2 Select home and foreign time alarm using the S2 button.
- 3 Hold the S2 button for two seconds. The SET message will appear. The minute digits will blink.
- 4 Use the S1 button to set the minutes.
- 5 Press the S3 button. The hour digits will blink.
- 6 Use the S1 button to set the hours.
- 7 Press the S2 button to confirm and exit.

**HOW TO USE THE DAILY ALARMS AND HOURLY CHIMES**

To display the alarm time, select ALM 1 or ALM 2 mode using the S2 button in alarm mode.

Use the S1 button to set the status of the alarm and chime functions of the chosen alarm. Press the button once to activate the daily alarm. Press the button again to activate the hourly chime. Press the button a third time to activate both functions. To deactivate both, press the S1 button a fourth time. The chime and alarm indicators will appear when their respective functions are active.

**WHEN AN ALARM OR HOURLY CHIME GOES OFF**

A tune will go off by the hour if the hourly chime function is activated and a 20-second alarm tune will be emitted at the designated time when the alarm is active. To stop either tune, press any button.

To disable the functions, select ALM 1 or ALM 2 and use S1 button to turn off the indicator of the function as desired.

**HOW TO USE THE STOPWATCH**

For a straight forward count-up,

- 1 Select stopwatch mode using the S3 button. The last recorded time of the stopwatch will be displayed. Press the S2 button to clear the old record.

- 2 Press the S1 button once to start the stopwatch. The watch will start counting from 00'00"00 if the watch is cleared. Otherwise, it will pick up from where it last left off. The watch will count up to 59 minutes and 59.99 seconds before starting from zero again.
- 3 To stop counting, press the S1 button once. Press the button again to resume from where it left off. To clear the stopwatch, press the S1 button to stop counting and then press the S2 button.

The stopwatch is equipped with a split function for you to keep track of individual lap time. To use the function,

- 1 While the stopwatch is running, press the S2 button once whenever you want to register a lap. The stopwatch is still running in the background. To display the currently accumulated time, press the S2 button.
- 2 Repeat the last step until you have registered all the laps.
- 3 Press S1 to stop counting. Press the button again to resume or press the S2 button to clear.

Note: You can leave the stopwatch running while switching over to other operating modes. The STW indicator will light up as a reminder.

**HOW TO USE THE TIMER**

To set the count down time,

- 1 Select timer mode using the S3 button. The last selected timer setting will be displayed.
- 2 Use the S2 button to alter the setting. You can select among 1, 3, 5, 10, 15, 20, 25, 30, 45 and 60 minutes.

To start a countdown, press the S1 button. Press the button again to stop the countdown or a third time to resume from where it left off.

After reaching zero on a countdown, a 20-second beep will go off. To stop the beeping, press any button. The timer will reload automatically.

**BATTERY INFORMATION**

The watch uses a 3.0V lithium button cell battery, which in normal circumstances will be good for 1-2 years. However, the battery life will vary due to shelf time and the manner the watch is used.

**FOLLOW THESE 8 TIPS TO GET THE MOST OUT OF YOUR NEW WATCH!**

1. Never Pull out the crown or operate the pushers/buttons under water.
2. Make sure your crown is returned to the original position before you expose your watch to water.
3. If your watch is exposed to saltwater it is very important to wash it thoroughly under tap water and wipe dry with a soft cloth. Keep it clean!
4. Sever impacts or drops may affect your watches water resistance and performance.
5. Avoid exposing your Freestyle watch to extreme temperatures such as in a hot shower, Jacuzzi, sauna or hot tub. The combination of extreme heat and water may cause your watch to lose some of its water resistance.
6. Avoid exposing your watch to chemicals, soaps or solvents as they deteriorate the water resist seals in your watch.
7. Never try to remove the caseback, leave this to a certified watch repair technician or Freestyle service center. This will help in preventing water leakage from improper battery replacement.
8. It is advisable to have your watch pressure tested annually and to re-furbish your watch every 2-3 years to extend the life of the watch.

**TWO YEAR LIMITED WARRANTY**

Your Freestyle watch is warranted to be free of defects in materials or workmanship, under normal use, for a period of two years from the date of purchase. This limited warranty excludes damage resulting from improper care or handling, accidents, modification, unauthorized repairs, normal wear, or other causes which are not defects in materials and workmanship. If your watch is defective, please send your watch to the address below and include the following:

1. A copy of your original receipt
2. The completed and signed Repair Form
3. A money order payable to Odyssey Time Inc. in the amount of \$8.50 for processing and handling. If using a credit card; be sure to include the name on the card, the card number and the expiration date

Odyssey Time Inc  
30 East Pearce Street  
Richmond Hill, Ontario  
Canada, L4B 1B7  
service@seikocan.com  
Tel: 1-800-668-6571  
905-763-1066

Please do not include any items of personal value in your shipment.

If there is a covered defect, we will at our option repair the defective part(s), or replace the watch with the same product (if available) or a similar product of equal price. We reserve the right to refuse either repair or replacement (but not both) if the cost of doing so would be disproportionate to the defect. This limited warranty is in place of all other express and implied warranties of any kind, which are hereby excluded. In no event shall Freestyle be liable for direct, indirect, incidental or consequential damages arising out of the use of the watch, and any recovery limited to the purchase price. No other person or company is authorized to change this limited warranty, and your dealer is solely responsible for any other warranties. For non-warranty service, contact the address below.

The Freestyle warranty extends only to product purchased from an authorized Freestyle retailer.



**REPAIR FORM**

30 East Pearce Street  
Richmond Hill, Ontario  
Canada, L4B 1B7

- Money Order
- Master Card
- Visa

Name: \_\_\_\_\_

Address: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Telephone: \_\_\_\_\_

*Credit Card Information*

Credit Card Number:

\_\_\_\_\_

Name on Credit Card:

\_\_\_\_\_

Expiration Date:

\_\_\_\_\_

Signature:

\_\_\_\_\_

visit our site  
[www.freestyleusa.com](http://www.freestyleusa.com)

SHARK CLASSIC MID-02

TRIM