



## 750 SHARK X WATCH INSTRUCTIONS

 
### FEATURES

- ANALOG WATCH MOVEMENT
- DIGITAL WATCH DISPLAY
- DAY, DATE, MONTH
- CURRENT TIME (HOUR, MIN. & SEC.)
- DAILY ALARM
- CHRONOGRAPH WITH SPLIT TIMER
- OPTIONAL 24-HOUR TIME
- HOURLY CHIME
- WATER-RESISTANT TO 330 FEET
- NIGHT VISION™ BACK LIGHT

To operate your FreeStyle® watch, please read the following instructions:

### SETTING ANALOG TIME

To set time, pull crown out (position 1) and rotate clockwise, moving the watch hands until the correct time appears. Then firmly push crown in (position 2). This will activate your watch.

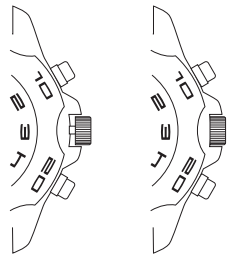

pos. 1 pos. 2


### DIGITAL WATCH OPERATION
 
#### NORMAL TIME MODE

(The term "mode" refers to the function status of the watch.) Normal time mode shows hours, minutes, seconds and a.m. or p.m. To set time, see instructions below.

#### KEY TO SYMBOLS


- A - Right Bottom (Start/Stop)
- B - Left Bottom (Set)
- C - Left Top (Mode)

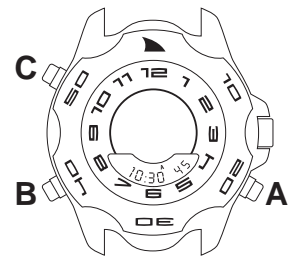

### HOW TO SET DAY, DATE AND MONTH


Press MODE button **C** until date mode is displayed. Date mode is indicated by "date" flashing in upper left portion of display. To set date, press and hold set button **B** for about three seconds; date will flash. Press start/stop button **A** to advance date; hold for rapid advance. Press set button **B**; month will flash. Press start/stop button **A** to advance month; hold for rapid advance. Press

 set button **B**; day will flash. Press start/stop button **A** to advance day; hold for rapid advance. Press MODE button **C** to complete setting at any time.

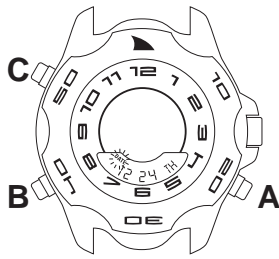

### HOW TO SET NORMAL TIME & 24-HOUR TIME FORMAT

 Press mode button **C** once from date mode to enter normal time mode. Press and hold set button **B** for about three seconds. Seconds digits will flash.

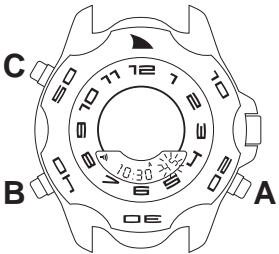


Press start/stop button **A** to reset seconds digits to "00". If seconds are greater than 30, one minute will be added to the minutes display.

To set minutes, press set button **B**; minutes digits will flash. Press start/stop button **A** to advance the minutes digits. Hold for rapid advance.

To set hours, press set button **B**; hours digits will flash. Press start/stop button **A** to advance the hour digits; hold for rapid advance. "A" or "P" will be displayed. Note: "A" designates time is in a.m., and "P" designates time is in p.m.

 
To set 24-hour military time, press set button **B**; "12" will flash. Press start/stop button **A** to change "12" to "24." At any time while setting your Freestyle® watch, you may press MODE button **C** to exit the setting mode, and return to normal time mode.

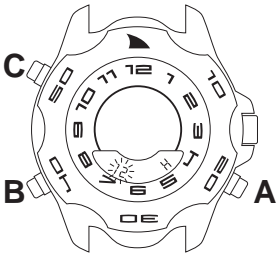


### HOW TO ARM/DISARM HOURLY CHIME:

To arm or disarm the hourly chime while in normal time mode, press and simultaneously hold start/stop button **A** and set button **B**. The chime symbol (🔔) will appear on the right side of the display when the hourly chime is armed.

 
### HOW TO SET AND OPERATE THE DAILY ALARM:

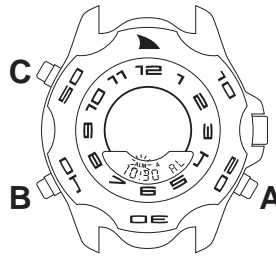


From normal time mode, press mode button **C** once to enter alarm mode. "ALM" will flash on upper left side of display. To set alarm, press and hold set button **B** for about three seconds; hour digits will flash. Press start/stop button **A** to advance hour digits; hold for rapid advance. Press set button **B**; minutes digits will flash. Press start/stop button **A** to advance minutes digits; hold for rapid advance. Press MODE button **C** to complete alarm setting at any time. To arm or disarm alarm, press start/stop button **A**. Alarm symbol (🔔) will appear on left side of display when alarm is armed.

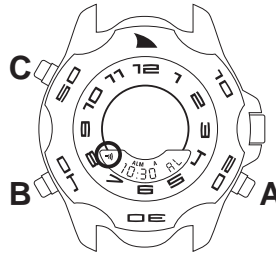 

### HOW TO OPERATE THE CHRONOGRAPH:

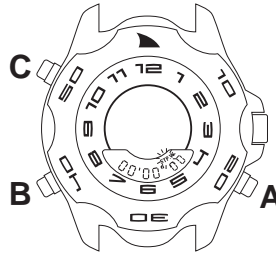 

 From date mode, press mode button **C** three times to enter chronograph mode. "STP.W" will flash on upper right side of display. Press start/stop button **A** to start (or stop) the chronograph counting.

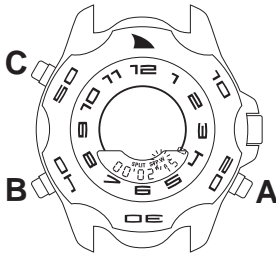

Split time is the time elapsed since the start of the chronograph. To use the split time feature, press set button **B** while the chronograph is counting.

NOTE: The chronograph will continue to count while the split time is displayed. To release split time mode and continue counting, press set button **B**. To stop chronograph

counting, press start/stop button **A**. To reset the stopped chronograph to zero, press set button **B**.

### HOW TO OPERATE THE NIGHT VISION™ BACKLIGHT:

Press start/stop button **A** to activate the Night Vision™ backlight. Note: Night Vision™ backlight will function only in normal time mode and date mode.

### CARE AND MAINTENANCE

1. Back case cover should only be removed by an authorized watch repair specialist.
2. Always rinse your watch in fresh water after immersion in salt or chlorinated water.
3. Do not expose watch or band to chemicals such as gasoline, aerosol sprays, paint or solvents.
4. Periodically clean with a soft cloth and fresh water.

### WARRANTY INFORMATION

Freestyle U.S.A. warrants, to the original purchaser, that its watches are free from defects in materials and workmanship for a period of ten (10) years under normal use. The warranty excludes batteries, crystal, watch case plating, and strap/bracelet/ band. The warranty excludes normal wear and tear and abuse.

Special note: Freestyle® watches are designed and engineered to be highly water-resistant, and to withstand the most active of lifestyles. The most important component in keeping your watch water-resistant is the case back O-ring, which prevents water from entering the watch through the case back.

Water leakage most often occurs after improper battery replacement. We strongly recommend having a certified jeweler, watch repair technician or Freestyle's service center replace your battery. Water leakage due to improper battery replacement is not covered under warranty.

Should your Freestyle® watch require warranty service, send it along with the following:

1. A copy of your sales receipt
2. Your printed name and address
3. Your telephone number
4. A brief description of the problem
5. Please include \$8.50 for processing and handling, using one of the following payment methods:

- Check
- Money order
- Credit card (be sure to include card number and expiration date)

REMEMBER: NEVER INCLUDE A SPECIAL WATCHBAND OR ANY OTHER PERSONAL ARTICLES OF VALUE IN YOUR SHIPMENT.

Send to the following address:

Freestyle  
Attn: Individual Returns  
47-50 33rd Street  
Long Island City, NY 11101

(718)-729-8890

Please allow 30 days for return of your watch.

Neither this warranty, nor any other warranty expressed, is assumed for any incidental or consequential damages, including but not limited to the mathematical accuracy of the product. Some states do not allow limitations on how long an implied warranty lasts, or the exclusions of or limitations on consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

This warranty applies to watches purchased in the United States. For watches purchased outside the United States, please contact your authorized Freestyle® dealer for warranty information.

If your watch requires servicing not covered under our warranty (battery, crystal, strap/bracelet/band, watch case plating), or refurbishing, complete the return form (next column) and return with your watch.



**Freestyle**®

Attn: Individual Returns  
47-50 33rd Street  
Long Island City, NY 11101  
(718)-729-8890

Battery	\$ 4.00
Case	10.00
Bezel	6.00
Band(Polyurethane)	12.00
Band(Leather)	12.00
Band(Metal)	20.00
Band(Nylon)	7.00
California residents add 7.25% tax	
Processing and handling	8.50

Total \$ \_\_\_\_\_

- Check or Money Order
- Master Card
- Visa

Account# \_\_\_\_\_ Expiration Date \_\_\_\_\_

Printed Name \_\_\_\_\_

Address \_\_\_\_\_

Phone Number \_\_\_\_\_

Signature \_\_\_\_\_