



Congratulations on the purchase of your Freestyle® watch. Please read these instructions carefully to understand how to operate your Freestyle® timepiece. With proper care, your Freestyle® timepiece will provide years of trouble-free service. Should your watch ever require repair, return it directly to Freestyle® at the address shown in the warranty information.

P1. POSITION 1

P2. POSITION 2

HOW TO START YOUR WATCH

Quartz Analog Movement: To start your watch remove the plastic guard from under the crown, then press the crown in against the case. The second hand will begin advancing in one-second intervals.

TO SET TIME:

1. PULL crown carefully out to **position P2** and turn hands to correct time.
2. Push crown in to restart. Ensure crown is pushed all the way in to **position P1** to ensure water-resistance.

Caution: Wearing or storing the watch with the crown in the "middle" position (**P2**) will cause damage to the movement. Always return the crown to the normal closed position.

WATER AND SHOCK RESISTANCE

Water Depth rating for your watch can be found on the dial, bezel and caseback.



200M WATER RESISTANCE CASE

- ⊗ SHOWER ⊗ SURFING
- ⊗ SWIMMING ⊗ DIVING



100M WATER RESISTANCE CASE

- ⊗ SHOWER ⊗ SURFING
- ⊗ SWIMMING DIVING



50M WATER RESISTANCE CASE

- ⊗ SHOWER SURFING
- ⊗ SWIMMING DIVING



30M WATER RESISTANCE CASE

- ⊗ SHOWER SURFING
- SWIMMING DIVING

WARNING: TO MAINTAIN WATER-RESISTANCE DO NOT PRESS ANY BUTTONS OR PULL OUT OR UNSCREW THE CROWN UNDER WATER.

CARE AND MAINTAINANCE

1. Watch is water-resistant only as long as lens, push buttons and case remain intact.
2. Watch not depth rated to 200 Meters should not be used for diving.
3. Rinse watch with fresh water after exposure to salt water, sand or chlorine.
4. If your watch has a rotating bezel, rinse it thoroughly after use in salt water or sand, rotating the bezel several times while the watch is immersed in fresh water.
5. Watches are designed to pass ISO test for shock-resistance. However, care should be taken to avoid damaging crystal/lens.
6. Your battery should be replaced approximately every two years.

Special note: Freestyle® watches are designed and engineered to be highly water-resistant, and to withstand the most active of lifestyles. The most important component in keeping your watch water-resistant is the case back O-ring, which prevents water from entering the watch through the case back. Water leakage most often occurs after improper battery replacement. We strongly recommend having the Freestyle's service center replace your battery. Water leakage due to improper battery replacement is not covered under warranty.

FABRIC BAND CARE

All Freestyle® fabric watch bands are made from the highest quality material. They are washable in warm water and a mild liquid soap. Since your watch is water resistant, it is not necessary to remove the band from the watch when washing it. For stubborn stains, scrub with a small brush (i.e. a toothbrush) and rinse thoroughly. If your fabric band has leather attached, apply a small amount of a good quality water and stain repellent leather care product to the leather portion before and after washing.

NIGHT VISION™ BACKLIGHTING

If your Freestyle® watch is equipped with the Night Vision™ backlighting feature, you can activate the light on analog styles by pressing the button located on either the two o'clock or three o'clock position adjacent to the crown. On some analog watches, pushing the crown activates the light. The light will remain activated for as long as you hold the button. For Digital Freestyle® Shark Watches press the push button P4 to activate the Night Vision backlighting. Additionally, some models feature a delay that will keep the light active for a brief period after you release the button.

Under normal circumstances, use of the Night Vision™ backlight will not affect battery life. However, repeated and frequent use of the backlight will reduce battery service life.



Freestyle® warrants, to the original purchaser of a watch purchased from an authorized Freestyle® retailer, a limited lifetime warranty that its watches are free from defects

in materials and workmanship. The following are not covered under warranty: battery, case, strap/bracelet/band and crystal. Accidental loss, breakage or damage due to normal wear or misuse of the product, including but not limited to the mathematical accuracy of the product, is not covered under this warranty. Some states do not allow limitations on how long an implied warranty lasts, or the exclusions of or limitations on consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state.

Under this warranty Freestyle® at the discretion of our repair center will either repair or replace your watch at no cost. There will, however, be a nominal charge for the cost of handling and shipping your watch back to you. You will be responsible for the cost of any repair needed that is not covered under the warranty. Proof of purchase and/or original receipt from an authorized Freestyle® retailer is required to validate your warranty.

If the watch case is opened by anyone other than an authorized Freestyle® repair center,

the warranty is voided. Any other form of guarantee to you by the retailer is their responsibility. This warranty applies to watches purchased in the United States. For watches purchased outside the United States, please contact your local authorized Freestyle® dealer for warranty information.

Please use our automated repair system for any warranty repairs by clicking on the following link (<https://www.freestyleusa.com/pages/welcome-to-freestyle-watch-repair-center>) and following the instructions for completing a repair order.

Automated Repair Form

After receiving the acknowledgment email from our repair center for your repair order, please carefully package your watch and send it via insured parcel post or other reliable shipping method, preferably trackable for your protection, to the address below.

PLEASE INCLUDE THE FOLLOWING:

A copy of the original receipt, copy of the repair ticket or acknowledgment email, or your printed name, address, phone number, email address and a brief description of the problem.

Freestyle® Repair Center
2701 E State Highway 121 Suite 650
Lewisville, TX 75056

Please do not include any special watchband or any other items of personal value in your shipment. Although we strive to repair and return your watch to you as quickly as possible, please allow up to 30 days for processing and the return of your serviced watch.