FS81322
WORLDTIME

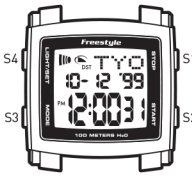

S1. Stop Button
S2. Start/split Button
S3. Mode Button
S4. Light/set Button

DISPLAY MODES:
The watch has six display modes: NORMAL TIME, WORLD TIME, ALARM (ALM), STOP-WATCH (STW), RECALL and TIMER (TMR).

To change from one display mode to another, press S3 button once.

NOTE: In any display mode, if there is no key manipulation for a few minutes, the watch will automatically return to NORMAL TIME mode.

NOTE: In any setting mode, if there is no key manipulation for a few minutes, the watch will automatically save the entered data and exit the setting procedure.

TO SET THE TIME AND CALENDAR:
1. Press S3 button to select NORMAL TIME mode.
2. Press and hold S4 button for around 2 seconds, the hour format will blink.
3. Press S1 or S2 button to toggle between 12-hour and 24-hour format. The P.M. indicator may be displayed to indicate the time period 12:00 A.M. – 11:59 P.M. in 12-hour format.
4. Press S3 button, the second digits will blink.
5. Press S1 or S2 button to reset the second digits to 00.
6. Press S3 button, the minute digits will blink.
7. Press S1 button to decrease the value or S2 button to increase it. Holding down the button will speed up the process.
8. Press S3 button, the hour digits will blink.
9. Press S1 button to decrease the value or S2 button to increase it. Holding down the button will speed up the process.
10. Follow the same pattern to set the year, month, date and local city selection.
11. To set the local city selection, press S1 or S2 button to select among the 24 preset cities / time zones.
12. After finished making all the settings, press S4 button to confirm.

NOTE: The day (of the week) is automatically set in accordance with the date. The date can be set within the range of 1 January 2000 to 31 December 2099.

NOTE: The selected hour format will apply to both NORMAL TIME mode and WORLD TIME mode.

TO TOGGLE BETWEEN DAYLIGHT SAVINGS TIME (DST) AND STANDARD TIME IN NORMAL TIME MODE:
In NORMAL TIME mode, press S1 button to toggle between Daylight Savings Time (DST) and Standard Time. The DST indicator will be displayed when Daylight Savings Time is displayed.

TO SELECT AND DISPLAY THE TIME OF WORLD TIME CITY IN WORLD TIME MODE:
1. Press S3 button to select WORLD TIME mode.
2. Press S2 button to select among the 24 preset cities / time zones.
3. Press S1 button to toggle between Daylight Savings Time (DST) and Standard Time. The DST indicator will be displayed when Daylight Savings Time is displayed.

WORLD TIME CITY CODE REFERENCE TABLE:

City Code	City	Hour Difference
MDY	MIDWAY	-11HR
HNL	HONOLULU	-10HR
ANC	ANCHORAGE	-9HR
LAX	LOS ANGELES	-8HR
DEN	DENVER	-7HR
CHI	CHIGAGO	-6HR
NYC	NEW YORK	-5HR
CCS	CARACAS	-4HR
RIO	RIO DE JANEIRO	-3HR
-2HR	-2HR	-2HR
-1HR	-1HR	-1HR
LON	LONDON	0
PAR	PARIS	+1HR
CAI	CAIRO	+2HR
MOW	MOSCOW	+3HR
DXB	DUBAI	+4HR
KHI	KARACHI	+5HR
DAC	DHAKA	+6HR
BKK	BANGKOK	+7HR
HKG	HONG KONG	+8HR
TYO	TOKYO	+9HR
SYD	SYDNEY	+10HR
NOU	NOUMEA	+11HR
AKL	AUCKLAND	+12HR

TO SET THE ALARM TIME:
1. Press S3 button to select ALARM mode.
2. Press S2 button to select among alarm entries 1, 2 and 3 to set.
3. Press and hold S4 button for around 2 seconds, the minute digits will blink.
4. Press S1 button to decrease the value or S2 button to increase it. Holding down the button will speed up the process.
5. Press S3 button, the hour digits will blink.
6. Press S1 button to decrease the value or S2 button to increase it. Holding down the button will speed up the process.
7. After finished making all the settings, press S4 button to confirm.

NOTE: The alarm will automatically be activated after being set.

TO TURN ON/OFF THE ALARM:
In ALARM mode
1. Press S2 button to select among alarm entries 1, 2 and 3 to set.
2. Press S1 button to activate the alarm. The alarm indicator will appear.
3. Press S1 button again to deactivate the alarm. The alarm indicator will disappear.

TO TURN ON/OFF THE HOURLY CHIME:
In NORMAL TIME mode,
1. Press S2 button to activate the hourly chime. The chime indicator will appear.
2. Press S2 button again to deactivate the hourly chime. The chime indicator will disappear.

WHEN AN ALARM OR HOURLY CHIME GOES OFF:
A tune will be emitted by the hour when the hourly chime is activated.

An alarm tune will be emitted at the desig-nated time when the alarm is activated. To stop the tune, press any button.

TO USE THE STOPWATCH:
1. Press S3 button to select STOPWATCH mode.
2. The stopwatch will then be displayed in its current state–reset, running or stopped.
3. To resume a counting, press S2 button to resume from where it left off.
4. To start a new counting, reset the stop watch to zero first.
   Press S1 button to stop counting, then press S1 button again to reset.

For the measurement of elapsed time:
In STOPWATCH mode,
1. Press S2 button to start counting.
2. To stop counting, press S1 button. Press S2 button to resume from where it left off.
3. To reset to zero, press S1 button to stop counting and then press S1 button again.

For the measurement of split time:
In STOPWATCH mode,
1. Press S2 button to start counting.
2. While the stopwatch is running, press S2 button to register a lap. The lap number and lap time of the recorded lap will be displayed and the stopwatch is still running in the background.
   After around 5 seconds, the lap number and split time of the current lap will be displayed.
3. Repeat the last step until all the laps have been registered.
4. To stop counting, press S1 button. Press S2 button to resume from where it left off.
5. To reset to zero, press S1 button to stop counting and then press S1 button again.

NOTE: Illustration of lap time and split time:
a) Lap time – individual lap time.
b) Split time – cumulative lap time.

NOTE: The stopwatch can record up to a maximum of 20 laps (the first 19 laps and the last lap registered).

NOTE: The stopwatch can count up to a maximum of 23 hours, 59 minutes and 59.99 seconds.

NOTE: You can leave the stopwatch running while switching over to other operating modes.

TO USE THE RECALL FUNCTION:
1. Press S3 button to select RECALL mode.
2. Press S1 or S2 button to scroll through the recorded individual lap time and total elapsed time.

NOTE: The recall function is available only when there is lap record stored.

NOTE: The lap record will be cleared when the stopwatch is reset.

TO SET THE TIMER:
1. Press S3 button to select TIMER mode.
2. Press and hold S4 button for around 2 seconds, the second digits will blink.
3. Press S1 button to decrease the value or S2 button to increase it. Holding down the button will speed up the process.
4. Press S3 button, the minute digits will blink.
5. Press S1 button to decrease the value or S2 button to increase it. Holding down the button will speed up the process.
6. Press S3 button, the hour digits will blink.
7. Press S1 button to decrease the value or S2 button to increase it. Holding down the button will speed up the process.
8. After finished making all the settings, press S4 button to confirm.

NOTE: The maximum countdown value of the timer is 23 hours, 59 minutes and 59 seconds.

TO USE THE TIMER:
1. Press S3 button to select TIMER mode.
2. The timer will be displayed in its current state – reset, running, or stopped.
3. To resume a counting, press S2 button to resume from where it left off.
4. To start a new counting, reload the timer first.
   Press S2 button to stop counting and then press S1 button.
5. After reaching zero in a countdown, a tune will be emitted. To stop the tune, press any button.

NOTE: You can leave the timer running while switching over to other operating modes.

TO USE THE BACKLIGHT:
Press S4 button to turn on the backlight for around 3 seconds.

To reduce carbon foot print, these Freestyle instructions are printed with soy inks on recycled paper.

NON-BG0041-FS-INST-PKG-R02