Freestyle

#709 SHARK CX4™
WATCH INSTRUCTIONS

FEATURES:

- CURRENT TIME
- DAY/MONTH/DATE
- CHRONOGRAPH
- LARGE DIGIT DISPLAY
- DAILY ALARM
- TWO TIMERS
- OPTIONAL 24-HOUR TIME
- WATER-RESISTANT TO 330FT/100M
- NIGHT VISION™ ILLUMINATION

KEY REFERENCES

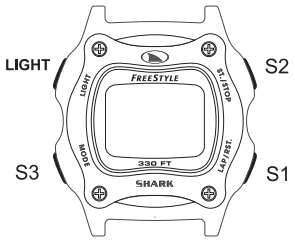

In normal time mode, the button functions are as follows:

LIGHT - Turns on the Night Vision™
S1 - Lap/Reset and to select digits
S2 - Start/Stop and to set function
S3 - Changes the function

HOW TO SET NORMAL TIME

In normal time mode, push the S3 button seven times. The seconds digits will begin to flash. Push the S2 button to reset the seconds to zero.

Press the S1 button to set the minutes. When the first minute digit flashes, press the S2 button to advance the digits. Press the S1 button again. When the second minute digits flash, press the S2 button to advance the digits.

Press the S1 button again to set the hours. When the hour digits flash, press the S2 button to advance the digits.

Press the S1 button again to set the date. When the date digits flash, press the S2 button to advance the digits.

Press the S1 button again to set the month. When the month digits flash, press the S2 button to advance the digits.

Press the S1 button again to set the day. When the day digits flash, press the S2 button to advance the digits.

24 - HOUR SETTING

To toggle between 12 and 24-hour modes, press the S1 button seven times and then press the S2 button. 24H or AM/PM will be displayed on the screen. Press the S3 button to return to the normal time display.

SETTING DUAL TIME

From normal time mode, press the S3 button six times to enter the dual time setting mode. Press the S1 button to flash the hour digits. Advance the hour digits by pressing the S2 button. After setting dual time, push the S3 button twice to return to normal time mode.

HOW TO SET TIMERS

In normal time mode, push the S3 button four times to set Timer 1. To set Timer 2, press S3 five times from normal time mode. To set these timers, press the S1 button to flash the hour digits. Advance the hour digits by pressing the S2 button. Press the S1 button again to flash the first minute digit. When the digits flash, press the S2 button to advance them. Press the S1 button again to flash the second digit of the minutes. Press the S2 button advance the digits. Push the S1 button again to set the timer. Press the S2 button to start and stop the countdown timers.

SETTING THE DAILY ALARM

From normal time mode, press the S3 button once to enter AL 1 setting mode. Press the S1 button to flash the hour digits. Advance the digits by pressing the S2 button. Press the S1 button to flash the first minute digit. Advance by pressing the S2 button. Press the S1 button again to flash the second minute digit. Advance the digits by pressing the S2 button.

To turn AL1 on and off, push the S3 button once from normal time mode. AL1 will appear on the screen. Push the S2 button to toggle between on and off.

SETTING THE SINGLE ALARM

From normal time mode, press the S3 button twice to enter the AL2 setting mode. Push the S1 button to flash the hour digits. Advance the digits with the S2 button. Push S1 button again to flash the first minute digit. Advance with the S2 button. Press the S1 button again to flash the second minute digit. Advance with the S2 button.

To turn AL2 on and off, push the S3 button twice from normal time mode. AL2 will appear on the screen. Push the S2 button to toggle between on and off.

CHIME SETTINGS

To turn the chime on and off, hold the S2 button down in normal time mode. While holding the S2 button down, press the S1 button to turn on the chime, represented by a “bell” icon. Press the S1 button again to turn off the chime.

USING THE CHRONOGRAPH

In normal time mode, press the S3 button three times to enter the chronograph mode. Push the S2 button to start and stop the chronograph. To record a lap time, press the S1 button while the chronograph is running. The lap time will appear on the display while the chronograph continues to run. Press the S1 button again to return to the chronograph. When the chronograph is stopped, press the S1 button to reset it back to zero.

HOW TO OPERATE THE NIGHT VISION™

Press the LIGHT button to activate the Night Vision™ illumination. The light will remain illuminated for approximately four seconds.

CARE AND MAINTENANCE

1. Back case cover should only be removed by an authorized watch repair specialist.
2. Always rinse your watch in fresh water after immersion in salt or chlorinated water.
3. Do not expose watch or band to chemicals such as gasoline, aerosol sprays, paint or solvents.
4. Periodically clean with a soft cloth and fresh water.

WARRANTY INFORMATION
FreeStyle warrants, to the original purchaser, that its watches are free from defects in materials and workmanship for a period of ten (10) years under normal use. The warranty excludes batteries, crystal, watch case plating, and strap/ bracelet/ band. The warranty excludes normal wear and tear and abuse.

Special note: FreeStyle® watches are designed and engineered to be highly water-resistant, and to withstand the most active of lifestyles. The most important component in keeping your watch water-resistant is the case back O-ring, which prevents water from entering the watch through the case back.

Water leakage most often occurs after improper battery replacement. We strongly recommend having a certified jeweler, watch repair technician or FreeStyle's service center replace your battery. Water leakage due to improper battery replacement is not covered under warranty.

Visit our website at:
www.freestyleusa.com