Freestyle®

#711 SHARK CX5™
WATCH INSTRUCTIONS

FEATURES:

- CURRENT TIME
- DAY/MONTH/DATE
- CHRONOGRAPH
- LARGE DIGIT DISPLAY
- DAILY ALARM
- OPTIONAL 24-HOUR TIME
- WATER-RESISTANT TO 330FT/100M
- NIGHT VISION™ ILLUMINATION

KEY REFERENCES

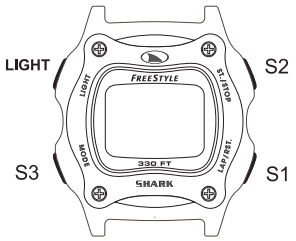

In normal time mode, the button functions are as follows:

LIGHT - Turns on the Night Vision™
S1 - Displays the alarm time
S2 - Displays the date
S3 - Changes the function

HOW TO SET NORMAL TIME

In normal time mode, press and hold the the S3 button for three seconds. Release the S3 button and press it again. The seconds digits will flash. Press the S1 button to reset the seconds to zero.

After resetting the seconds, press the S2 button to flash the minute digits. Advance the digits by pressing the S1 button.

Press the S2 button again to flash and set the hour digits. Advance the digits by pressing the S1 button.

Press the S2 button again to flash and set the month digits. Advance the digits by pressing the S1 button.

Press the S2 button again to flash and set the date digits. Advance the digits by pressing the S1 button.

Press the S2 button again to flash and set the day segments. Push the S1 button to select the correct day.

Press the S3 button to exit the normal time setting mode and enter the normal time mode.

24 - HOUR SETTING

To set the time in 24-hour mode, press and hold the S1 button. While holding the S1 button down, press the S3 button. The hour digits will change from 12-hour mode to 24-hour mode. 12-hour mode is represented by the AM or PM displayed in normal time mode. 24- hour mode will not show AM or PM.

HOW TO VIEW THE DATE

In normal time mode, press and hold the S2 button to view the date in month-day format. To view the date in day-month format, press and hold the S2 button and at the same time press the S1 button. Use the same procedure to toggle between the two date formats.

SETTING THE DAILY ALARM

In normal time mode, press and hold the S3 button until the hour digits begin to flash. Press the S1 button to advance the hour digits. Press the S2 button to flash the minutes digits. Advance the digits by presing the S1 button. Push the S3 button to exit the alarm setting mode after it has been set.

HOW TO TURN ON/OFF ALARM AND CHIME

In normal time mode, press and hold the S1 button. While holding down the S1 button, press the S2 button once to turn on the chime function.

Press the S2 button again to turn on the alarm function.

Press the S2 button again to turn off the chime function.

Press the S2 button again to turn off the alarm function. Release the S1 button to return to normal time mode.

USING THE CHRONOGRAPH

In normal time mode, press the S3 button three times to enter the chronograph mode. Push the S2 button to start and stop the chronograph. To record a lap time, press the S1 button while the chronograph is running. The lap time will appear on the display, while the chronograph continues to run. Press the S1 button again to return to the chronograph. When the chronograph is stopped, press the S1 button to reset it back to zero.

HOW TO OPERATE THE NIGHT VISION™

Press the LIGHT button to activate the Night Vision™ illumination. The light will remain illuminated for approximately four seconds.

CARE AND MAINTENANCE

1. Back case cover should only be removed by an authorized watch repair specialist.
2. Always rinse your watch in fresh water after immersion in salt or chlorinated water.
3. Do not expose watch or band to chemicals such as gasoline, aerosol sprays, paint or solvents.
4. Periodically clean with a soft cloth and fresh water.

WARRANTY INFORMATION
FreeStyle U.S.A. warrants, to the original purchaser, that its watches are free from defects in materials and workmanship for a period of ten (10) years under normal use. The warranty excludes batteries, crystal, watch case plating, and strap/ bracelet/ band. The warranty excludes normal wear and tear and abuse.

Special note: FreeStyle® watches are designed and engineered to be highly water-resistant, and to withstand the most active of lifestyles. The most important component in keeping your watch water-resistant is the case back O-ring, which prevents water from entering the watch through the case back.

Water leakage most often occurs after improper battery replacement. We strongly recommend having a certified jeweler, watch repair technician or FreeStyle's service center replace your battery. Water leakage due to improper battery replacement is not covered under warranty.

Visit our website at:
www.freestyleusa.com